


*Tiger Cub*  
STOVE





**CAST IRON  
SOLID FUEL HEATING  
STOVE**

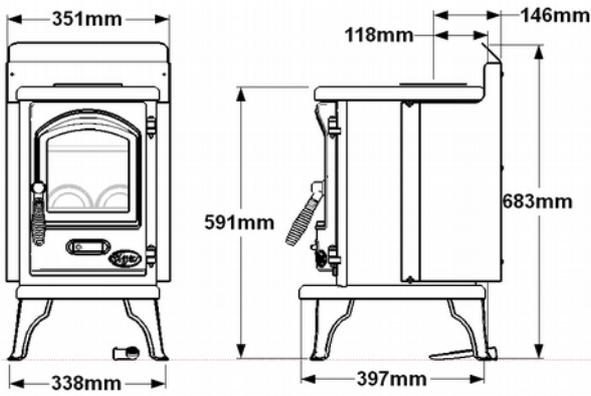

(Shown with optional rear heat shield)



**INSTALLATION AND OPERATING INSTRUCTIONS**

**LEAVE THIS DOCUMENT WITH THE HOUSEHOLDER!**



All Tiger Stoves exceed the safety and performance requirements of European Standards Intermittent burning solid fuel roomheaters for installation with a single dedicated chimney.

Manufacturer's tests, pending test by CEN laboratory		Cub Stove
Fuel		Wood Logs (Beech)
Test Standard		EN 13240
Test Cycle		0.7kg per 0.75hrs
Settings		Air slide 50%
Flue Draught Pa (ins WG)		12
Efficiency %		78.8
Recommended Output Rating kW		4.0 kW
Mean Flue Gas Temp Rise °C		250
Minimum air entry requirement		2200 mm <sup>2</sup>
Minimum Clearance to combustibles (allow min 50mm clearance to non-combustibles)		500mm (150mm at rear with heat shield fitted) - but see further instructions inside
Emissions as if O <sub>2</sub> =13%	NO <sub>x</sub> mg/m <sup>3</sup>	98
	CO %	0.23
	CxHy mg/m <sup>3</sup>	
	Gas flow g/sec	2.4
	Smoke Emission mg/m <sup>3</sup>	32

*Glyn Hughes*

I declare that this information is true, these products meet the requirements of Harmonised Standards and are fit for sale. Signed on behalf of the manufacturer by Glyn Hughes, Design Engineer, at Winster, Derbyshire, England 15. Jan. 2018

**Read these instructions! Use only recommended fuels!**

This document, when completed by the installer, constitutes part of a 'Hearth Notice' for purposes of Building Law. It must be left with the householder and placed where it can easily be found. <b>INSTALLED AT LOCATION:</b>  BY:  EMERGENCY CONTACT:  I definitively assert that this installation is safe, has been lit and demonstrated to the householder, conforms with current building regulations and with these instructions  SIGNED: _____ DATE: _____	Flue Draught measured on commissioning: <input type="text"/> Pa <input type="text"/> WG  Fuel used on commissioning <input type="text"/>
--	---

**TO FIND A QUALIFIED INSTALLER, FUEL SUPPLIER or CHIMNEY SWEEP, CONTACT:**

**UK:** The Solid Fuel Association, 7 Swanwick Court, Alfreton, Derbyshire DE55 7AS Tel:0845-601-4406 [www.solidfuel.co.uk](http://www.solidfuel.co.uk)

**Rol:** Irish Nationwide Fireplace Organisation, 162 Capel Street, Dublin 1 Tel:01-801-5959 [www.fireplace.ie](http://www.fireplace.ie)



Distributed only by: Percy Doughty & Co, Imperial Point, Stone Hill Rd, Farnworth, Bolton BL4 9TN

Tel: 01204-868-550

**THIS APPLIANCE BECOMES EXTREMELY HOT AND CAN PRODUCE POISONOUS GASES.**

A fire-guard should be used if children or the infirm are present. The installer is required to EXACTLY follow these instructions and to completely comply with all local, national and international standards.

The Cub is a freestanding solid multi-fuel heating stove.

**INSTALLING** a stove is a 'controlled service', the law expects that it is either supervised by a qualified installer or that the building inspector is informed. Check with your local authority.

**ASBESTOS:** Your stove does not contain asbestos, but take care to avoid disturbing asbestos in an old installation.

**WEIGHT:** Your stove is heavy (60kg) take great care when moving it and ensure that the intended fireplace can support the weight- consider fitting a load distributing plate.

**YOUR CHIMNEY,** by becoming warm, makes the gas inside it rise, pulling fresh air into the stove to make it work. It must:

- Generate a draught in use of at least 12Pa (0.05ins wg)
- Be capable of withstanding the temperatures generated.
- Be absolutely incapable of leaking fumes into the dwelling


This may commonly be achieved by it:

- Being at least 5m high.Terminating at least 1m above any roof ridge.
- Having an internal cross-section preferably never less than 125mm diameter, or more than 0.14m<sup>2</sup> (eg 375 x 375mm). Exceptionally, where 125mm flue is impractical, a 100mm internal diameter flue may be used, which must be short, straight, accessible at both ends for cleaning and completely insulated.
- Being free from even the slightest crack or source of leakage.
- Having no bends sharper than 45°.
- Being swept and entirely free of obstructions
- Being connected only to this one appliance.
- Being of thick masonry or otherwise highly insulated.
- Conforming to local building regulations.

Special rules apply where the flue passes through timber, thatch or other vulnerable materials- take specialist advice.

Although it is possible to access the chimney through the fire with the throat plate removed, fit hatches to provide access if needed.

**INSTALLATION**

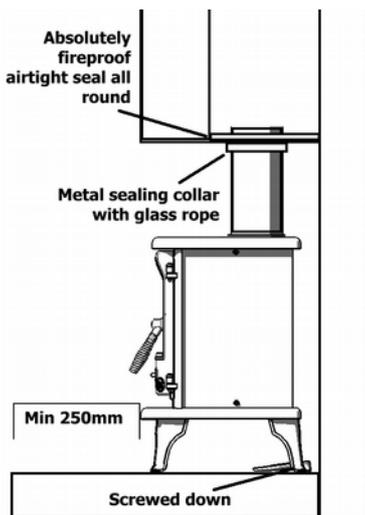

Typical installation (left) in masonry fireplace with solid hearth extending at least 250mm in front of stove. Completely and absolutely sealed into oversize chimney with a 125mm diameter connecting flue pipe.

Where the stove is to be fitted in a shed, inland marine craft or other building for occasional use a short 125mm or 100mm internal diameter flue may be used,


with the proviso that the flue is:

- Substantially straight
- Insulated - to keep the gases hot so that they rise
- At least 2m high
- Accessible from both ends for cleaning
- Protected against rain by a cap


Special care is needed to protect vulnerable, such as wooden or plastic, buildings, or craft against fire.

Follow the detailed instructions for marine installations on a separate leaflet at [www.soliftec.com/installation.htm](http://www.soliftec.com/installation.htm)


**SAFE CLEARANCES**

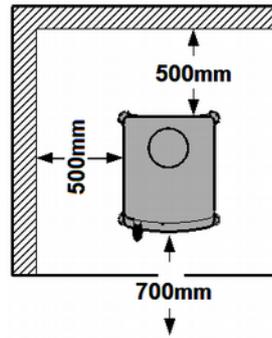

This stove can get VERY hot - hot enough to set fire to combustibles such as carpet, textiles, wood, glass-fibre (GRP), paper, wallpaper, plastics, furniture, clothing, cardboard, plasterboard some distance away. Under normal circumstance, with good ventilation the stove should be fitted at least 500mm away from combustible materials (700mm in front), on a non-combustible hearth (temperature below is <100°C so a light-duty hearth can be used)

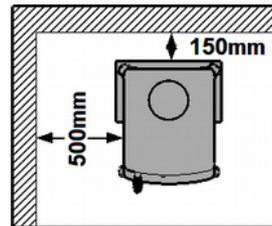

If the optional heat shield is fitted, the safe distance to combustibles can be reduced to 150mm from the shield at the rear

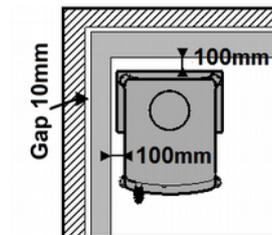

Clearance around the stove can be reduced to just 100mm where any combustible materials are protected by either  
 (1) 150mm of solid masonry, or  
 (2) a protection panel of 45mm calcium silicate foam board with a 10mm air gap behind

**AIR SUPPLY**

Your stove needs air to breathe - there should be a permanent fresh air supply into the space in which it is installed equal to about 550mm<sup>2</sup> for each kW of nominal output.

This degree of air can often be provided by leakage around door frames etc, especially in older buildings. It is commonly accepted that this alone may suffice for appliances below about 5kW output. It must be a matter for the judgement of the installer as to whether an extra permanent air vent is required. Where is needed, it is wise to fit an outside vent as close to the fire as possible, to prevent unpleasant draughts. An extractor fan, or another fuel-using appliance in the same building, can remove this air.

**CHECK THE INSTALLATION !**

Whichever method of installation is used, It is **imperative** that: (1) The route for gases from the stove to the chimney terminal is **completely** air-tight; even the tiniest gap or crack can spoil the updraught. Seal all joints with fireproof cement and/or heatproof rope. (2) It is possible to sweep the entire length- access doors may be required. (3) The entire construction is of durable fireproof materials. (4) **Fit a CO alarm.** Once installed, light the fire, demonstrate it to the householder and check that:

- 1) It burns controllably and does not emit fumes to the room
- 2) The route for gases from the stove to the chimney terminal is completely airtight, unobstructed and able to be swept.
- 3) The entire construction is of durable fireproof materials.
- 4) The flue presents a draught in use of at least 12Pa

**LIVING WITH YOUR STOVE**


Every fuel, chimney and condition of use is different. Only experience will show which are the best settings for you.

**LIGHTING** If lighting after a period of non-use, do check that the flueways and chimney are completely clear. Empty the ashes.

Place two or three firelighters close together, or screwed-up paper covered with dry sticks, at the back of the grate and light them. When they are burning well gently fill the fire with dry fuel, close the door and set the air control slide to the 'high' (right) position. When the fire is burning well, move the control to the lowest practical setting.

**FILLING:** Don't fill above the level shown in the diagram.

**CONTROL** How fast the fire burns depends on how much air reaches the fuel. The stove has just one air control, below the window. Move the slide to the right for highest output, to the left for 'low'. The control can get very hot, so move it only with the handle supplied.

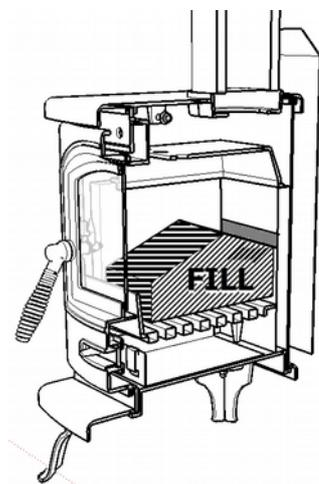

The best settings for you will depend on your fuel, air supply and flue draught and can only be found from experience.

**EMPTYING ASHES** Stir the fire with a poker. Use the angled ashpan tool to lift out the ashpan. Remember to let ash cool before disposing in plastic sacks or dustbins. There is no need to empty every last speck, but ash from mineral fuels should never be allowed to build up so that it comes into contact with the underside of the grate.

**EXTENDED BURNING** Allow the fire to burn down to a low, hot firebed. Empty the ash and fully fill with hard fuel such as anthracite (c30mm size is best). Set the air control to 'low' and your stove can burn for up to ten hours without attention.

**KEEPING THE WINDOW CLEAN** Simply operating the stove for a few minutes at high output will often burn-off any deposits left by tarry or wet fuels. Severe stains can be removed when cold with a domestic bleach cleaner. The window is not glass but a transparent ceramic, it may develop tiny hairline cracks, these are harmless, and a characteristic of the toughest and most heat-resistant material known. Reduce the risk of staining by using only *very dry* fuel.

**OPENING THE DOOR** This stove is designed to be operated only with the door closed. Open the door very slowly to minimise fume emission and prevent hot fuel falling out. Remember that the whole stove becomes extremely hot.

**SUMMER SHUT DOWN:** Before a long period of non-use, empty fuel and ash, remove the throat plate and leave all the air controls open to allow ventilation to reduce condensation.


## FUELS

There is no 'perfect' fuel, so we strongly recommend that you try a selection of fuels (or mixtures) to find which suits you best. Do avoid dusty materials like sawdust, they can burn far too violently.

**SMOKE CONTROL:** In certain areas special rules apply to reduce smoke nuisance. Check with your local authority.

**WOOD** only emits as much carbon to the atmosphere as the tree took in when growing, so wood is considered the 'carbon neutral' fuel. When wood is cut down its cells are full of water. Burning such wet or 'green' wood wastes heat in making steam and produces flammable, acidic tars which will cling to, and rapidly damage, your stove and chimney. Split logs will typically take two years to become reasonably dry, round logs very much longer. Cracks in the ends, a hollow sound when tapped and bark falling away are all signs that a log may be ready for use. The fine, white residue produced when wood burns is not ash, but the remains of cell walls which can burn if kept hot enough, so don't de-ash the fire until absolutely necessary when using wood.

For best performance, and *always* for low smoke emission:

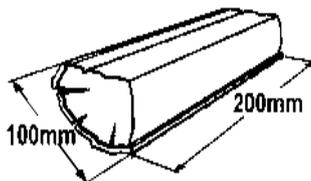

Split logs lengthways for drying

- Use logs no bigger than about 100mm x 200mm
- Ensure logs are absolutely dry (less than 20% moisture)
- Fill the stove criss-cross, so air can circulate between logs.
- Fill 'little and often'
- When first lighting, or reviving a fire from embers, use only very small, thin, dry, sticks.

**JOINERY WASTE** Dry wood offcuts will burn well, but don't expect softwood waste to burn as cleanly or for as long as hardwood logs.

**PEAT:** Sod turf must be thoroughly dry. BNM peat briquettes are approved for use in Smokeless Zones in the RoI.

**LIGNITE** (not smokeless) is a natural mineral, between peat and coal. It lights easily and burns well, but produces much ash

**HOUSECOAL or BITUMINOUS COAL** (not smokeless) makes lots of tarry smoke and large volumes of flammable gas which make it difficult to control and risk explosions. Despite its low cost, it rarely represents value for money. Don't use housecoal.

**ANTHRACITE** (Smokeless) is a natural hard, shiny form of coal. Slow to light, it can burn for very long periods with great heat. Despite its high price-per-bag it generally works out to be one of the cheapest of all fuels. Use the 'small nuts' size.

**COKE** (Smokeless) is coal from which the smoke has been removed. Sometimes difficult to light, it burns very cleanly.

**BRIQUETTES** Are compressed blocks of fuel, generally able to burn for long periods and remarkable for their consistency. 'Homefire' and 'Phurnacite' are smokeless types while other brands are made from lignite, peat or housecoal.

**PETROLEUM COKE** sold as 'Petcoke', 'Longbeach' and other names, is made from oil, should not be used, it will rapidly degrade interior parts.

**HOUSEHOLD WASTES** Some plastics give off toxic fumes when burned and remember that batteries and aerosols explode! The stove is not an incinerator, so only ever use the recommended fuels and NEVER use liquid fuels in any form.

## PROBLEMS?

Problems like those listed here are usually due to some difficulty with the installation, chimney or fuels, so please check back through this leaflet carefully. If necessary seek specialist advice.

**SMOKE FROM THE CHIMNEY** It is quite normal for a little smoke to be emitted from the chimney when the fire is cold. Use only VERY dry wood or smokeless fuels.

**DAMAGED LINERS** The Cub stove gets very, very hot inside, it is quite usual for the replaceable liners to crack or craze. They need only be replaced when they have almost completely disintegrated. Help them last longer by using only *very dry* fuel.


**POOR HEAT OUTPUT:** A stove can heat a typical room of about 12m<sup>3</sup> volume for each kW of output, so a 5kW model can heat up to (12 x 5) 63m<sup>3</sup>, a room of about 5m square. The actual size depends on the insulation and air-change ratio of the room. To attempt to heat a larger room will result in excessive fuel consumption and damaging overheating.

**LACK OF CONTROLLABILITY** Wood and some other fuels may burn excessively until the gases in them have been used up. You can reduce this effect by making sure that the fire is set to 'low' for a while before refuelling and checking that the door seals fully

**DIFFICULTY BURNING FOR EXTENDED PERIODS** If the fire goes out with fuel still in the firebox, then this is probably because too little air has been reaching it, try leaving the air controls open a little more. Check that the door seals are sound and that there are no cracks or gaps anywhere in the flue. For longest burning, we recommend hard fuels such as anthracite.

**THE DOOR CATCH** may need adjusting as the rope seal 'beds down'. Simply loosen the screw at the end of the shaft and move the tapered pin as required. Re-tighten the screw.

**CONDENSATION** onto cool surfaces inside the stove can be severe if fuel is in any way damp.

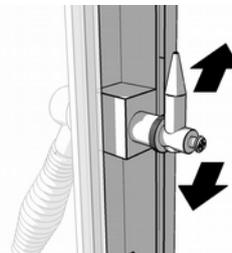

Use only very dry fuel.

**OVER-FIRING:** It is possible to leave the fire too long with the controls set too high leading to 'over firing', seen as glowing metal parts, excessive chimney temperature and risk of parts failing or chimney fires. Always set controls to the lowest practical setting.

**SMOKE COMING INTO ROOM** Fumes are poisonous- smoke emission must NEVER be tolerated, causes might be:

**NEW STOVE:** There is often a smell and sometimes visible fumes as the paint cures. This normally stops after an hour or so.

**INADEQUATE SEALS:** Are all flue pipes and connectors *absolutely* gas-tight? Even the tiniest crack or gap can spoil the draught. Does an inset appliances fully seal against the fireplace?

**BLOCKED THROAT PLATE:** Has soot and ash collected on the 'throat plate' above the inner back part of the firebox?

**UNSUITABLE, BLOCKED OR UN-SWEPT CHIMNEY:** The first requirement for correct operation is a sound chimney. Check the requirements earlier in this document and in any case of doubt engage a professional sweep or chimney engineer.

**POOR AIR SUPPLY:** Lack of air to the fire is a common cause of smoking and poor performance. Air supply problems may be worse in certain wind conditions (often incorrectly ascribed to 'downdraught', which is in fact very rare), where air can be sucked out of the room. The answer is to fit an air vent, as near to the fire as possible, facing into the usual wind direction.

**DOWNDRAUGHT:** Wind can blow *down* a chimney if there is something higher nearby such as a tree, hill or high building. Fitting an anti-downdraught cowl to the chimney top can cure this. Types which cannot be swept through are not recommended.

**POOR CHIMNEY DRAUGHT-** Chimney draught in use **MUST** be

at least 12Pa.

**CHIMNEY FIRE:** In the rare event of deposits inside the chimney igniting (roaring sound + dense smoke and sparks from the chimney) immediately close the door, shut all air controls and call the fire brigade. Prevent fires by using *very dry fuel* and having your chimney swept regularly.

## MAINTENANCE

**MONTHLY-** With the fire cold, remove, clean and refit the throat (or 'baffle') plate below the flue outlet. Check that the flue is clear and unblocked, and that the door seals are sound.

**ANNUALLY- SWEEP THE CHIMNEY** The entire length of the chimney from stove to outlet should be swept annually, more often if smoky fuels are used.

**NEW PARTS** Your stove has been extensively tested for safety - please don't try to modify it and always obtain genuine spare parts.

**SURFACE FINISH** Wipe the stove body with a slightly damp cloth when cool. NEVER use aerosol spray or wax near the hot fire – they can ignite. Painted steel parts can be refurbished using special spray paint.


Your stove generates **VERY** high temperatures.

Eventually the internal parts will require replacement . Help parts to last by:

- Using only recommend, very dry, fuels.
- Emptying the ash very regularly when using mineral fuel -never allow it to touch the underside of the grate.
- Cleaning the throat plate regularly.
- Avoiding 'over-firing'

## PARTS AND ACCESSORIES

When ordering parts, you have the 'Cub' or 'Tiger Cub' Stove  
Tiger spares Tel: 01204-868-550

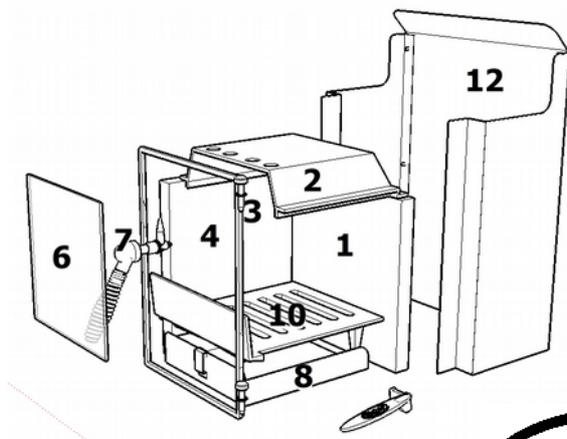

### Wearable parts

- 1 Replaceable Lining brick - Rear
  - 2 Throat (baffle) Plate
  - 3 Hinge Pin
  - 4 Replaceable Lining brick, left or right
  - 6 Window
  - 7 Door catch Assembly
  - 8 Ashpan
  - 10 Grate
  - 12 Optional Heat Shield Kit
- Touch-up paint, black  
Rope seal kit



Cub Stoves are a truly international product - designed and developed in England, tested in The Netherlands. They are cast using Australian iron and assembled in China from components manufactured in Japan, China, the USA and the UK